

PROJECT. QUANTITY QUANTITY	PROJECT:	TYPE	QUANTITY	
--------------------------------	----------	------	----------	--


Electrical:					
Nominal input voltage	100-240V				
Frequency range	50 / 60Hz				
Power consumption	30W (42-52VA)				
Input current	0.42A				
Integrated electronic transformer	24V DC output				
Approval - Safety	ETL/cETL				
User interface	Continuously dimmable rotary switch on the head				
Illumination:					
Fitted with	LED Technology				
Central illuminance at 1.0m	60,000 lux				
Light field diameter d10 at 1.0m	Ø = 16 cm (6.3in)				
Light field diameter d50 at 1.0m	Ø = 8.5 cm (3.3in)				
Depth of illumination L1 + L2	120cm (47.24in) 10 20000 20000 10000				
Color Temperature	4500 K >95				
Color Rendering Index Ra	>95				
Life time	40000h				
Weight:					
Light head	3 kg (6.6lbs)				
triango 30 C (includes light head)	15 kg (33lbs)				
Luminaire Materials	Head – polycarbonate & acrylonitrile butadiene styrene copolymer (PC &ABS); Arm – metal				
Fastening	Ceiling mount to structural ceiling, tube can be field cut to length (150-900 mm)				
Classification:					
triango 30	Class I; FDA Class I				
Degree of protection as per IEC 529	IP 20				
Light head	IP 43 (horizontal position)				
Electrical safety test according to:	AAMI ES60601-1, CSA C22.2#60601-1, IEC/EN 60601-1, IEC/EN 60601-2-41, IEC/EN 60601-1-2				
Special feature	Special feature Removable Sterilizable Handle included				
Component List - Included					

NOTE:

Component List - Included				
#	Part Number	Description		
1	US4-002-150	Mounting Plate 11.5 in.		
2	D74-285-000	Dome Cover		
3	US4-001-320	Pole, 700MM Length		
4	D74-544-100	Spring Balanced Arm		
5	D15-312-000	Head, Triango 30, 24V, LED		
6	US4-002-414	Dome Cover Kit w/ Collar		
7	US4-002-415	Disc Cover Kit w/ Collar		
Additional Information Available (Manuals)				
1	Call Factory	Triango Pre-Install Guide		
2	Included	Triango Manual		

Triango Spare Parts Manual

3 Call Factory

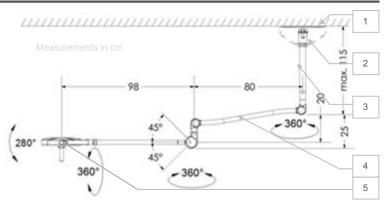

If fixture is to be installed above a drop ceiling, Additional items 6 or 7 must be ordered separately. Please refer to Triango Pre-Install Guide for installation suggestions.